



Line 'balancing' transformers should not be required for short cable runs. If not using, join input and output wires directly. Fit isolating transformers if the transmit or receive audio buzzes. Install close to Site Sentinel if used.

Install relay close to Site Sentinel unit

Connections to the Site Sentinel Alarm Interface. Alarm input and control outputs are configured to control intercom audio path change-over, door strike operation and call button signalling.

Use good quality twisted pair cable between the intercom point and the Site Sentinel installation. Eg CW1198. For very long cable lengths (above 300m), it may be necessary to use a relay with a higher coil resistance for the door strike.

Using the IVAMAX 988-4W intercom panel with a Site Sentinel installation.